

GB IS – Safeguards

Please read these instructions carefully before using the appliance and always follow the safety.

Important: People (including children) who are not able to use the appliance in a safe way, due to their physical, sensorial or mental capacity or their lack of experience or knowledge, must never use the appliance except if they are supervised by a person responsible for their safety or if they previously received instructions concerning the safe use of the appliance. Close supervision is necessary to prevent children from using the appliance as a toy.

- Check that your mains voltage corresponds to that stated on the appliance (230V, with ground).
- Never leave the appliance unsupervised when in use.
- From time to time check the appliance for damages. Never use the appliance if cord or appliance show any signs of damage. In that case, repairs should be made by a competent qualified electrician. Should the cord be damaged, it must be replaced by a competent qualified electrician in order to avoid all danger.
- Only use the appliance for ball pool cleaning and in the way indicated in these instructions.
- Before opening or cleaning the appliance, always unplug the appliance from the power supply.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never use the appliance near hot surfaces.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.